


# Installation Guide

## 8mm Single Sliding Door

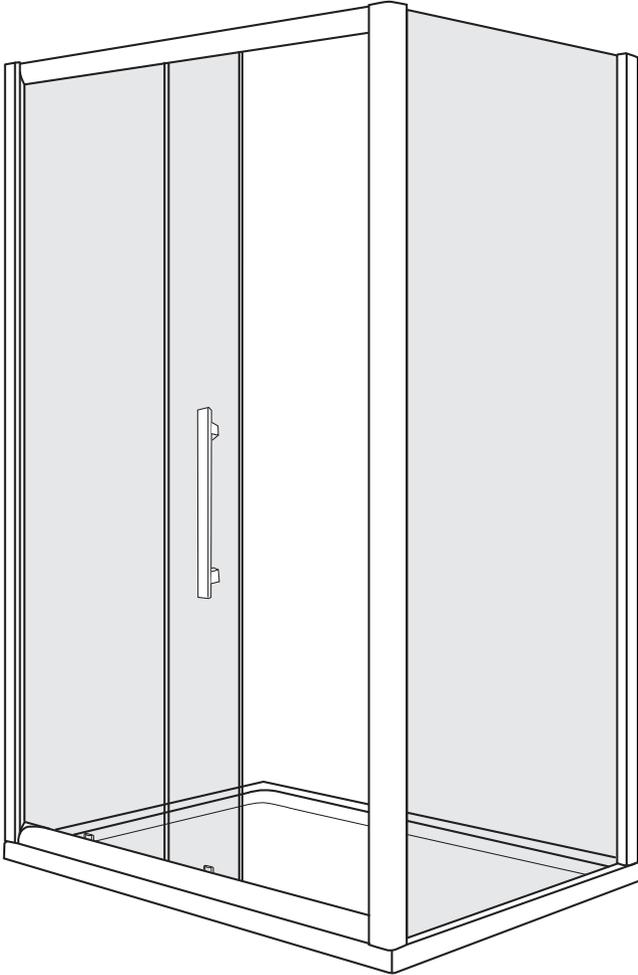

\* Side Panel shown for illustration purposes only.

# Before you Start



**Please read this Installation Guide fully.** Although these instructions are comprehensive we always recommend that a technically competent installer undertake the installation, as incorrect fitting will invalidate the guarantee.

Unpack with care and check that the enclosure is the correct colour, size, shape and type you require. Ensure that you have all the parts listed as supplied and check for any damage. **Do not install if you are not satisfied** and contact your local supplier.



## Important

Ensure the location where you wish to fit the enclosure is suitable. Check there are no electrical cables or pipe work behind the wall. Ensure you have a clean dry area to work within before starting.

The fixings provided for this enclosure are for use on solid walls only. If the enclosure is to be fitted on another type of wall such as plasterboard or stud walls, appropriate fixings should be used and additional tools, fixings or materials may be required.

Ensure that the shower tray installed is level and the walls are vertical, as the enclosure will not sit correctly on an uneven surface. The enclosure can also be used in a wetroom subject to the provision of a periphery area that is flat and level.

Once installed do not use the enclosure for 24 hours to allow the silicone to fully dry.



This product is designed to be used with square and rectangular trays only. The adjustment on this enclosure is 20mm.



**This sliding door can also be installed with a side panel. If installing with a side panel please refer to to side panel fitting instructions after stages 2, 4 and 5 of this instruction.**



## Safety Notes

Please ensure appropriate safety flooring is used as it is normal for spillage to occur when exiting from the shower.

Use safety eyewear and clothing when drilling walls and handling glass. Handle with care, safety glass cannot be re-worked or replaced by ordinary glass.

This product is heavy and requires a 2-person lift.

Keep small parts away from children.



## Cleaning

The enclosure must only be cleaned with warm soapy water and a damp cloth or sponge. Abrasive, caustic or scouring products must not be used as these will damage the surfaces of the enclosure.



## Technical Help

Technical Service Line: 0845 505 2211 / 01684 293311 Open Mon–Fri 9am–5pm




All dimensions shown are in millimetres unless otherwise stated.

# Tools and Materials Required


(not supplied)



Spirit Level

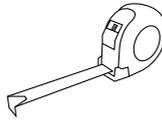


Tape Measure



Screwdriver




Pencil



Power Drill



Suitable Drill Bits

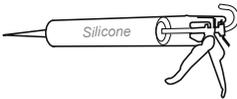

Silicone Sealant




Utility Knife



Safety Eyewear

# Parts Supplied


**A**

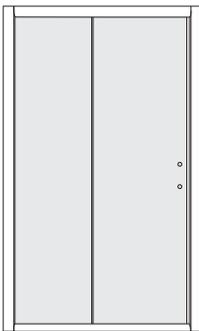

Qty 1

Fully Assembled Glass Door \*


**B**

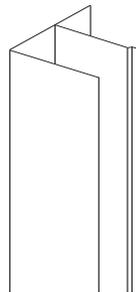

Qty 2

Wall Brackets

**C**

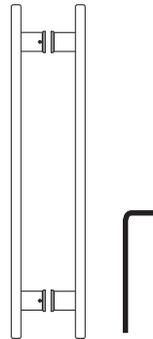

Qty 1

Door Handle  
(boxed with allen key)

\*Doors wider than 1100mm and including are supplied disassembled.  
See step 5 for assembly instructions using parts K–N.

# Parts Supplied

**D**



Qty 1

2.5mm Drill Bit

**E**



Qty 8

**F**



Qty 8

12mm Screws (ref E)  
30mm Screws (ref F)

**G**




Qty 8

30mm Frame Screws \*

\* Only doors bigger than 1000mm

**H**

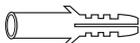

Qty 8

Rawl Plugs


**I**



Qty 2

Screw Cover Strips

**J**

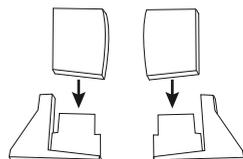

Qty 2

Frame Cap R/H & L/H

## Disassembled door parts – for doors wider than 1200mm

**K**



Qty 1

Glass Panel


**L**



Qty 1

End Rail

**M**



Qty 2

Top & Bottom  
Wheel Tracks

**N**




Qty 1

Door

# Installation


1

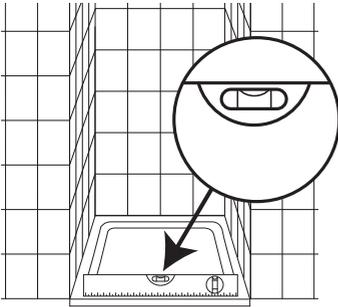

Using a spirit level, check that the shower tray is level and that walls are vertical.

The shower tray must have been fully sealed with silicone sealant at least 24 hours prior to installing enclosure.


2

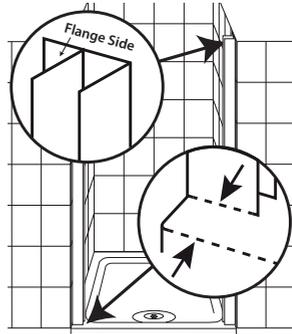

Drill four evenly spaced holes into the flange side of each wall bracket **B**. These holes will be used for fixing each bracket to the wall. Position the wall brackets onto the shower tray ensuring a distance of 10mm from the front edge of the tray.

**Note: If you are fitting with a side panel ensure one wall bracket is fixed to the far wall as described above.**


3

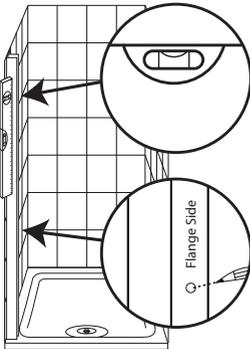

Using a spirit level, ensure the wall brackets **B** are straight and positioned vertically, then mark the drill positions through the four fixing holes drilled in Step 2.

**Note: The flange side of the wall brackets **B** (with the four drilled holes) must be positioned on the inner side of the shower tray.**

4

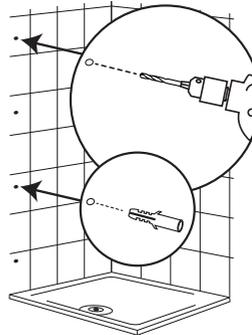


Remove the wall brackets **B** then drill holes in the marked positions on the wall using a 6mm drill bit. Fit the rawl plugs provided **C** (or appropriate fixings for your wall type). We recommend suitable eyewear be worn when drilling walls.

**Do not fit the wall bracket to the wall at this point.**

**Note: If you are fitting a side panel see separate side panel instructions at this stage.**

# Installation

## 5 (Doors wider than 1100mm)

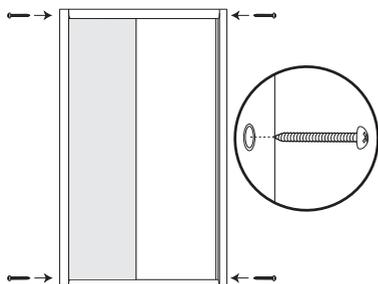


If you are fitting a sliding door wider than 1100mm it will be supplied disassembled.

To assemble, take the top and bottom wheel tracks (M) and secure the straight glass panel (K) onto the desired side of the track. Fit both tracks, end rail (L) and glass panel (K) together with the 30mm frame screws (G).

See Step 9 for instructions on fitting the door.

**Note: If you are fitting a side panel see the separate side panel instructions at this stage.**

## 6

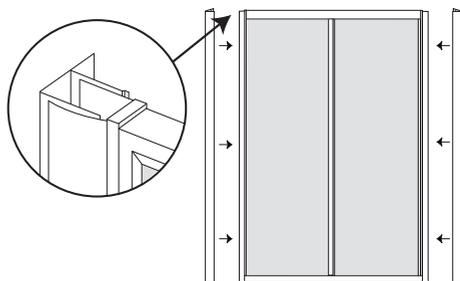


Slot the two wall brackets (B) onto each side of the assembled glass frame (A), then carefully sit the door onto the shower tray.

**Note: the wall brackets should be fitted off-set from the door, as shown, with the curved side of the door frame outermost.**

The door is reversible by turning the frame upside down for left or right hand fitting. Remove the door (see step 9) before reversing and ensure the wheels are the correct orientation.


## 7

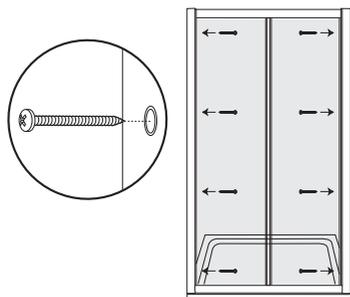

Fix the wall brackets (B) to the wall using the holes in the flange side of each bracket with the eight 30mm screws (F) provided.

**Do not over tighten. There should be enough play to allow the screw cover strip (I) to clip behind the inside edge of the wall bracket (B).**

## 8

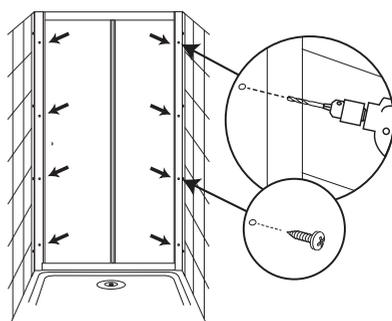


With the door frame in position, centered evenly and sitting correctly, use the 2.5mm drill bit (D) to drill four evenly spaced holes through each wall bracket and the door frame.

Use the eight self-tapping 12mm screws (E) to secure the door assembly to the wall brackets.

# Installation


9

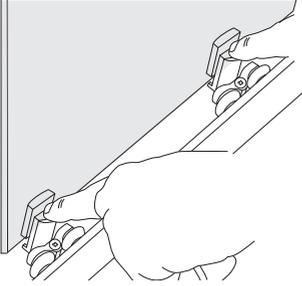

Fit the door into the frame if it is not already in place. Take each glass door, ensuring the handle holes are in the correct position. Slot the top of the door into the wheel track between the door stops and then push down on the bottom wheels so they click into the bottom wheel track securely.


The door can be removed by reversing the above instructions.

10

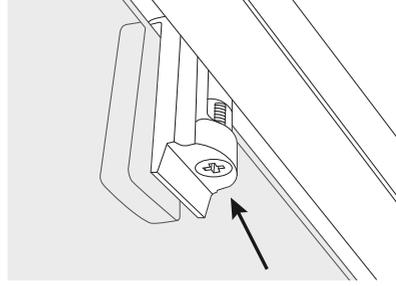


Some models may be supplied with a top adjustment. If this is the case, the door can be adjusted to make level using the crosshead screw adjusters on the top wheels.

11

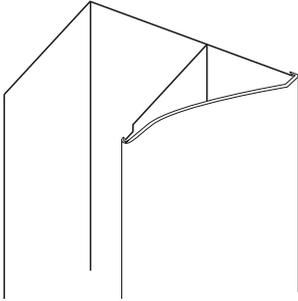

Fit the two screw cover strips ❶ onto each wall bracket. Clip the cover into the gap between the wall and the wall bracket ❷ and then clip the opposite side into place. (Any gap between the wall and the wall bracket will be sealed by silicone in Step 14.)

12

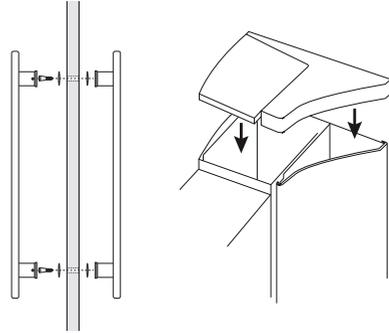


Dis-assemble the door handle ❸ using the allen key supplied and position through the holes in the glass door. Fit into place, re-assembling in reverse order, and secure the handle with the grub screws using the allen key.

Clip both the frame caps ❹ into place on top of the wall brackets to complete installation.

# Installation


13

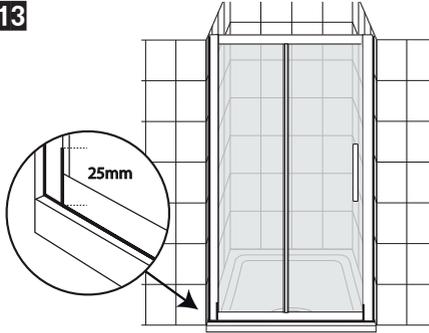

**On the outside of the shower**, apply a narrow bead of silicone to the outer edge of the wall brackets **ⓑ** on both sides.

Follow around the whole of the bottom of enclosure and 25mm up the join of the wall bracket.

14

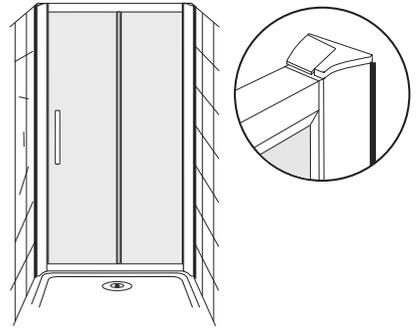

**On the inside on the enclosure**, apply silicone vertically where the wall brackets/cover strips meet the wall.

**Do not silicone the lower horizontal frame of the enclosure on the inside or the base of the wall brackets or screw cover strips.**

You must allow 24 hours for the silicone to dry before use.

Product supplied by the MX Group and/or its subsidiaries

Technical Service Line: **0845 505 2211 / 01684 293311** Open Mon–Fri 9am–5pm